 


2016 **PATHFINDER**

QUICK REFERENCE GUIDE



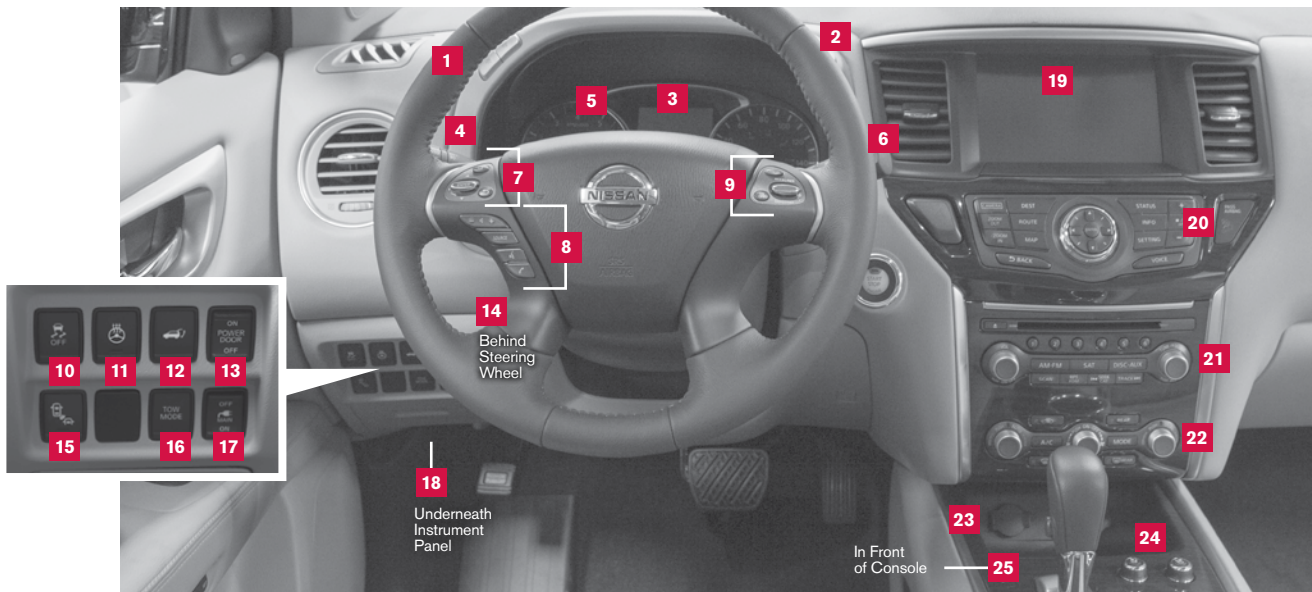

- 1** Instrument Brightness Control*
- 2** Twin Trip Odometer Reset Switch*
- 3** Vehicle Information Display
- 4** Headlight and Turn Signal Switch
- 5** Low Tire Pressure Warning Light
- 6** Wiper and Washer Switch
- 7** Vehicle Information Display Switch

- 8** Steering Wheel Switches for Audio* / Bluetooth® / Navigation*
- 9** Cruise Control
- 10** Vehicle Dynamic Control (VDC) System OFF Switch*
- 11** Heated Steering Wheel Switch*
- 12** Power Liftgate Switch
- 13** Power Liftgate Main Switch

- 14** Tilt / Telescopic Steering Column*
- 15** Blind Spot Warning / Rear Cross Traffic Alert Switch
- 16** Tow Mode Switch
- 17** Power Inverter Switch
- 18** Hood Release*
- 19** Control Panel Display Screen*
- 20** Front Passenger Air Bag Status Light*

- 21** Audio System
- 22** Heater and Air Conditioner (automatic)
- 23** Power Outlet
- 24** Climate Control / Heated Seat Switches*
- 25** 4WD-i Control Knob*

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

Around View® Monitor System with Camera Aided Sonar (parking sensor) (if so equipped) . . .	2
NavTraffic and NavWeather (if so equipped)	3
Hill Descent Control (HDC) (if so equipped)	4
Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA) (if so equipped)	4

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy Fill Tire Alert	5
Loose Fuel Cap	6
Fuel-filler Door	6
Towing Your Vehicle	6
Clock Set/Adjustment	7

FIRST DRIVE FEATURES

Nissan Intelligent Key® System	8
Power Liftgate (if so equipped)	9
Front Power Seat Adjustments (if so equipped)	10
2 ND Row Seats	10
3 RD Row Seats	11
Automatic Drive Positioner (if so equipped)	11
Outside Mirror Control Switch	12
Starting/Stopping the Engine	12
Headlight Control Switch	13
Wiper and Washer Switch	14
Heater and Air Conditioner (automatic)	14
Rear Climate Controls	16
AM/FM/SiriusXM® Satellite Radio with CD/DVD Player (if so equipped)	16
USB (Universal Serial Bus) Connection Port/iPod® Interface (if so equipped)	17
Cruise Control	18
Power Outlets	18

SYSTEM GUIDE

Vehicle Information Display	20
Bluetooth® Hands-free Phone System (if so equipped)	21
▪ System Operating Tips	21
Bluetooth® System with Navigation (if so equipped)	22
Bluetooth® System without Navigation (if so equipped)	24
Bluetooth® Streaming Audio with Navigation (if so equipped)	26
Navigation System (if so equipped)	27
NISSAN Mobile Entertainment System (MES) (if so equipped)	28
HomeLink® Universal Transceiver (if so equipped)	29



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system (section 1)**", the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

 
NEW SYSTEM FEATURES

AROUND VIEW® MONITOR WITH CAMERA AIDED SONAR (parking sensor) (if so equipped)

- With the ignition switch in the ON position, the Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The control panel displays various views of the position of the vehicle.
- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the front view and bird's-eye view screen is displayed.
- When the **CAMERA** button **1** is pressed again, the front view and front-side view screen is displayed.
- When the shift lever is in the **R (REVERSE)** position, the rear view and bird's-eye view screen will be displayed.
- When the **CAMERA** button **1** is pressed, the rear view and front-side view screen will be displayed.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m)
- There are some areas where the system will not show objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be viewed **2**.
 - When in the bird's-eye view, a tall object near the seam of the camera viewing areas **3** will not appear in the monitor.
- The distance between objects viewed on the Around View Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.




2

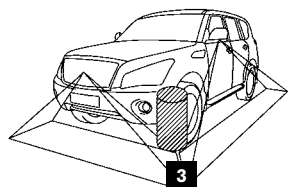

3

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

CAMERA AIDED SONAR (parking sensor)

- If the Camera Aided Sonar (parking sensor) detects objects toward the rear of the vehicle while the shift lever is in the **R (REVERSE)** position, a beep will sound until the object is within 3 ft (1 m). Then a continuous audible sound will be heard.
- Either in the bird's-eye view or front-side view, a red, yellow or green field will be displayed dependent on how far the object is from the rear of the vehicle and where the object is detected.
- To temporarily disable the sonar (parking sensor), follow this procedure:
 1. Start with the vehicle in the **P (PARK)** position.
 2. Move the shift lever to the **R (REVERSE)** position.
 3. On the vehicle information display, you will be prompted to turn off the sonar (parking sensor) by pressing the  button **4** on the steering wheel.
 - When the sonar (parking sensor) is disabled, in the bird's-eye view you will temporarily see a flashing gray sonar icon and red brackets on the corners of the vehicle that will stay on until the system is re-enabled.
- The sonar system will be restored when you move the shift lever out of the **R (REVERSE)** position and then back into the **R (REVERSE)** position.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

NAVTRAFFIC* AND NAVWEATHER* (if so equipped)

- Your vehicle's Navigation System is equipped with NavTraffic and NavWeather capabilities.
- NavTraffic enables your vehicle's Navigation System to display real-time traffic conditions, such as accidents or road construction, and may provide a detour to help avoid congestion.
- NavWeather tracks nationwide weather information, provides real-time weather reports and automatically alerts you to severe weather conditions around your current vehicle location.



*These features, SiriusXM® Satellite Radio, NavTraffic and NavWeather, require an active subscription. Multiple subscriptions may be necessary to activate the various features.

For more information, refer to the “**Viewing technical information (section 7)**” and the “**General system information (section 10)**” of your Navigation System Owner's Manual.

NEW SYSTEM FEATURES

HILL DESCENT CONTROL (HDC) (if so equipped)

The HDC system is designed to reduce driver workload when going down steep hills. The HDC system helps to control vehicle speed so the driver can concentrate on steering the vehicle. To activate the system:

 
- The 4WD shift switch must be placed in the **LOCK** position **1** and the vehicle speed must be under 15 mph (25 km/h) on steeper hill grades.
- The HDC switch **2** must be on.



For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)* (if so equipped)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- Push the warning systems switch **2** to temporarily turn the system off. When the system is off, the indicator light **3** on the switch and the indicator light **4** in the vehicle information display will extinguish.
- The indicator light **3** on the switch will also be off if all of the warning systems are deactivated using the Setting menu.
- The indicator lights **3** and **4** will illuminate after the ignition switch is ON and the BSW system is enabled. This indicates that the BSW system is operational.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (REVERSE)** position and the vehicle speed is less than approximately 5 mph (8 km/h).
- The radar sensors detect an approaching vehicle from up to 66 ft (20 m). The sensors are located on both sides near the rear bumper. The system gives visual and audible warnings if an approaching vehicle is detected.
- The RCTA system can be turned on or off through the Driving Aids menu in the vehicle information display.



For more information, refer to the "**Instruments and controls (section 2)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY FILL TIRE ALERT

- A **Tire Pressure Low – Add Air** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.



- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.

- When adding air to an under-inflated tire, the TPMS with Easy Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.





To use the Easy Fill Tire Alert:

 
1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning lights will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **Tire Pressure Low – Add Air** warning message and low tire pressure warning light **2** will extinguish.
 - When the low tire pressure warning light **2** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended that you visit a Nissan dealer for this service.
 - Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
 - The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 9)" of your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

ESSENTIAL INFORMATION

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the  button **2** on the steering wheel is pressed for about 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

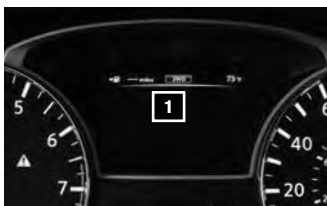

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

FUEL-FILLER DOOR

The fuel-filler door is located on the driver's side of the vehicle.

- The fuel-filler door automatically locks or unlocks when the driver's door is locked or unlocked.
- To open the fuel-filler door after unlocking, push the right side of the fuel-filler door.



For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

TOWING YOUR VEHICLE

- All-Wheel Drive (AWD) vehicle
 - An all-wheel drive vehicle must be towed with all wheels off the ground even if it is placed in 2WD mode.
- For proper towing and to prevent accidental damage to your vehicle, NISSAN recommends that a service operator tow your vehicle after carefully reading the Owner's Manual precautions.

For more information, refer to the "**In case of emergency (section 6)**" of your Owner's Manual.

CLOCK SET/ADJUSTMENT

AM/FM RADIO

- To adjust the time of the clock on the display:
 1. Press and hold the **DISP CLOCK** button **1**.
 2. Rotate the **TUNE/FOLDER** knob **2** to adjust the hour.
 3. Press the **AUDIO** button **2** or press the **DISP CLOCK** button **1** to accept the hour.
 4. Rotate the **TUNE/FOLDER** knob **2** to adjust the minutes.
 5. Press the **AUDIO** button **2** or press the **DISP CLOCK** button **1** to accept the minutes and exit the clock adjustment menu.



SATELLITE RADIO (if so equipped) AND WITH NAVIGATION (if so equipped)

- To adjust the time and the appearance of the clock on the display:
 1. Press the **SETTING** button on the control panel.
 2. Select the "Others" key.
 3. Select the "Clock" key.
- The following settings can be adjusted:
 - **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF based on the indicator light.
 - **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
 - **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
 - **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
 - **Daylight Savings Time:** The application of Daylight Savings Time can be turned ON or OFF.
 - **Time Zone:** Adjust the time zone. Choose a time zone from the available list.
- Press the **BACK** button to return to the previous screen.



For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.



FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM




The Nissan Intelligent Key® system allows you to lock or unlock your vehicle, open your liftgate and remotely start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).



REMOTE ENGINE START* (if so equipped)

- The remote start operating range is approximately 200 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For the remote start to function, the vehicle must be in the **P (PARK)** position with the ignition off and all doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **1**.
 2. Within 5 seconds, press and hold the engine start  button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the outside air temperature.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
 - After two remote starts, the ignition switch must be cycled before the remote start can be used again.
- To start driving, depress the brake pedal and press the ignition switch **START/STOP** button.



LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3** once or press the  button **1** on the Intelligent Key.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **3** once; the corresponding door will unlock. Push the door handle request switch **3** again within 30 seconds; all other doors will unlock, or
 - Press the  button **4** on the Intelligent Key to unlock the driver's side door. Press the  button **4** again; all other doors will unlock.




*Laws in some communities may restrict the use of remote starters. Check local regulations before using this feature.

LIFTGATE RELEASE (if so equipped)

- To open the rear liftgate, press the  button **5** for longer than 1 second.
- To close the rear liftgate, press the  button **5** again for longer than 1 second.

PANIC ALARM

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.


INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, press the ignition switch **START/STOP** button while depressing the brake pedal and the engine will start.



For more information, refer to the "**Pre-driving checks and adjustments (section 3)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

POWER LIFTGATE (if so equipped)

- When the liftgate is closed and locked, the liftgate will open automatically by:
 - Pushing the power liftgate switch **1** on the instrument panel.
 - Pushing the liftgate opener switch **2**; the liftgate must be unlocked, or you must have the Intelligent Key with you (that is, in your pocket or purse).
 - Pressing the  button **3** on the Nissan Intelligent Key[®] for more than 1 second.
- The power liftgate operation can be turned on or off by the power liftgate main switch **4** on the instrument panel.
 - When the power liftgate main switch **4** is pushed to the **OFF** position, power operation is not available using the power liftgate switch on the liftgate **5** or the liftgate opener switch **2**.



FIRST DRIVE FEATURES

LIFTGATE POSITION SETTING

- The liftgate can be set to open to a specific height by performing the following procedure:
 1. Open the liftgate using the request switch or the Intelligent Key.
 2. Pull the liftgate down to the desired position and hold the liftgate (the liftgate will have some resistance when being manually adjusted).
 3. While holding the liftgate in position, press and hold the power liftgate switch **5** located on the liftgate for approximately 5 seconds or until 3 beeps are heard.
- The liftgate will open to the selected position setting. To change the position of the liftgate, repeat steps 1-3 for setting the position of the liftgate.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

FRONT POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To recline the seatback, push the switch **2** forward or backward.



SEAT LIFTER (driver's seat)

- To raise or lower the front portion or height of the seat, push the front or back end of the switch **1** up or down.

 
POWER LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the seat lumbar support, push the front or back end of the switch **3**.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.

2ND ROW SEATS

- To slide the seat forward or backward, pull the center of the bar **1** up and hold it while you slide the seat forward or backward to the desired position. Release the bar to lock the seat in position.
- To recline the seatback, pull up on the recline handle **2** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

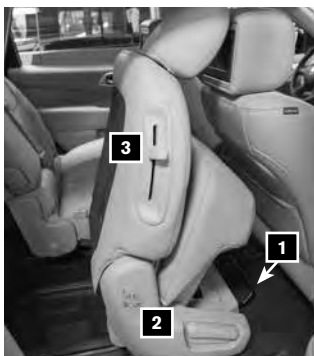

CHILD SEAT ACCESS MODE

- This feature is not available on the driver's side of the 2nd row seat.
- If a child safety seat is installed on the passenger's side of the 2nd row seat, the 3rd row can be accessed without removing the child safety seat.
- To access the 3rd row from outside the vehicle, lift up on the seatback release lever **3** and move the seat toward the front of the vehicle.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

MULTI-MODE

- To enter the 3rd row from outside the vehicle, lift up fully on the seatback release lever **3**. This will release the back of the seat and fold up the seat cushion.
- For access to the rear seat, slide the entire seat forward by pushing on the upper seatback area.
- To return the seat to a locked position, push the upper seatback rearward until the seatback and track are locked. Push the seat cushion down. Locking the seatback will also lock the track.

For more information, refer to the “**Safety—Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

3RD ROW SEATS

- To recline the seatback, pull up on the latch **1** located on the outside corner of each seatback. Lean back until the desired angle is obtained.
- To bring the seatback forward again, pull up on the latch **1** and move your body forward. The seatback will move forward.



For more information, refer to the “**Safety—Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

AUTOMATIC DRIVE POSITIONER (if so equipped)

Two positions for the driver’s seat, steering column (if so equipped) and outside mirrors can be stored in the automatic drive positioner memory.

- Follow this procedure to set the memory positions:
 1. Push the ignition switch to the ON or ACC position. (The vehicle should be stopped while setting the memory.)
 2. Adjust the driver’s seat, steering column (if so equipped) and outside mirrors to the desired positions using the adjusting switches for each feature.
 3. Push the **SET** switch **1**, and within 5 seconds, push the memory switch (**1** or **2**).
 4. The indicator light for the selected memory switch will illuminate for approximately 5 seconds, and a chime will sound when the memory is stored.
 5. The driver’s seat, steering column (if so equipped) and outside mirror positions are now set to your preferences.
 6. These memorized positions can also be linked to your Nissan Intelligent Key[®]. To link a memorized position to your Nissan Intelligent Key[®], press the unlock button on the key fob after completing the previous step.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, move the control switch **1** right or left.
- Adjust each mirror to the desired position using the switch **2**.



REVERSE TILT-DOWN FEATURE (if so equipped)

- The reverse tilt-down feature will turn both outside mirror surfaces downward to provide better rear visibility close to the vehicle.
 1. Apply the brake.
 2. Place the ignition switch in the ON position.
 3. Move the shift lever to the **R (REVERSE)** position.
 4. The outside mirror surfaces will move downward. (The mirror control switch **1** must be out of the center position.)
- The outside mirror surfaces will return to their original positions when one of the following conditions has occurred:
 1. The shift lever is moved to any position other than **R (REVERSE)**.
 2. The outside mirror control switch **1** is set to the center (neutral) position.
 3. The ignition switch is placed in the OFF position.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).

- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.



TURNING THE ENGINE OFF

 
- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the OFF position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the OFF position **2** to turn on the headlights.

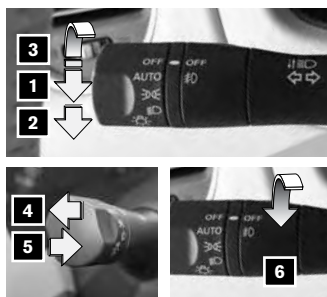

AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the **OFF** position, OFF position **1** or OFF position **2**.

HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or OFF position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light OFF will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams OFF selected for the fog lights to operate.
- Turn the switch (inside collar) to the OFF position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

 
For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the front wipers.
- 2** Intermittent (**INT**) – Operates the speed-sensing front wipers intermittently. The intermittent speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
- 4** Low (**LO**) – Front wipers operate at a continuous low-speed.
- 5** High (**HI**) – Front wipers operate at a continuous high-speed.
- 6** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

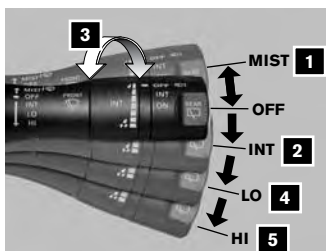

REAR WIPER AND WASHER

- 7** Intermittent (**INT**) – Rear wiper operates intermittently.
- 8** Low (**ON**) – Rear wiper operates at a continuous low-speed.
- 9** Push the lever forward to activate the rear washer. The rear wiper will operate several times.



For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.



HEATER AND AIR CONDITIONER (automatic)

- 1** **AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL**
 - The auto mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
 - Turn the driver's side temperature control dial to the left for cooler air or to the right for warmer air.
- 2** **DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL**
 - Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
 - Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.



3 ON-OFF BUTTON/FAN SPEED CONTROL DIAL

- Turn the fan speed control dial left to decrease fan speed or right to increase fan speed.
- Press the **ON-OFF** button to turn the system on or off.

4 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:
 - Air flows from the center and side vents.
 - Air flows from the center, side and foot vents.
 - Air flows mainly from the foot vents.
 - Air flows from the front defroster and foot vents.

5 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode .


6 REAR AIR CONDITIONER

- To control the rear automatic air conditioning system with the front air conditioner control panel:
 - Turn on the front climate control system by pressing the **ON-OFF** button.
 - Press the **REAR** button.




- When the rear automatic air conditioning system is on, the indicator light on the **REAR** button will illuminate and the front display will switch to the "Rear Air-conditioning" screen. Use the driver's temperature and fan speed buttons to adjust the settings.
- To adjust the front air conditioning system, press the **REAR** button again.
- To turn off the rear automatic air conditioning system from the front controls, press the **REAR** button until the "Rear Air-conditioning" screen is displayed. Then press the **ON-OFF** button **3**.
- The rear passenger controls are unavailable when the "Rear Air-conditioning" screen is shown on the front display.

7 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- Turn the temperature control dial **1** to set the desired temperature.
- To defrost the front and side windows, set the temperature control **1** and fan speed control **3** to their maximum settings.

8 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch  **REAR** to defrost the rear window and outside mirror (if so equipped).
- This function automatically turns off after approximately 15 minutes.

9 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

 
For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

REAR CLIMATE CONTROLS

- To activate the system:
 1. Turn on the front climate control system by pressing the **ON-OFF** button **1**.
 2. Press the **REAR** button **2** on the front control panel until the “Rear Air-conditioning” screen is displayed.
 - The indicator light will illuminate.
 - The fan speed, temperature, **AUTO** and **OFF** buttons will now control the rear automatic climate control system.
 3. Press the **REAR** button **2** again, and the screen will return to what was previously displayed.
 - The indicator light will stay illuminated to indicate that the rear automatic climate control system is active.
- **OFF** button **3** – Turns off the rear climate control system and the **REAR** button indicator light.
- Fan speed control buttons **4** – Press **+** or **-** to increase or decrease fan speed.
- Temperature increase and decrease buttons **5** – Adjusts the rear temperature up ▲ or down ▼.
- **AUTO** button **6** – The system automatically works to keep air flow and fan speed at a constant temperature.

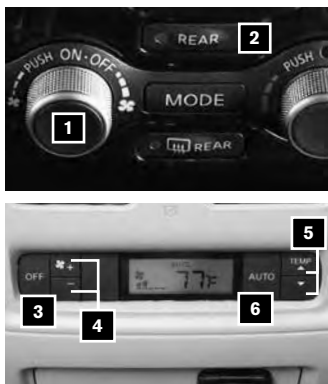

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



AM/FM/SiriusXM®* SATELLITE RADIO WITH CD/DVD PLAYER (if so equipped)

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

2 SEEK-CAT AND TRACK BUTTONS

- To scan quickly and stop at the previous or next broadcast station, press the **◀◀ SEEK-CAT** button or the **TRACK ▶▶▶** button.
- For satellite radio to switch to the previous or next category, press the **◀◀ SEEK-CAT** button or the **TRACK ▶▶▶** button.
- To change tracks on a CD, press the **◀◀ SEEK-CAT** button or the **TRACK ▶▶▶** button.
- To rewind or fast forward a track on a CD, press and hold the **◀◀ SEEK-CAT** button or the **TRACK ▶▶▶** button.

3 AUDIO BUTTON/TUNE/FOLDER KNOB

- To manually tune the radio, turn the **TUNE/FOLDER** knob left or right.
- Press the **AUDIO** button to access the audio settings screen.

4 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and 18 for the satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **AM-FM 5** or **SAT 6** then tune to the desired AM, FM or satellite radio station.
- Next press and hold the desired station preset button (**1-6**) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/iPod® INTERFACE (if so equipped)

- The USB port **1** is located in the center console under the armrest.
- When a compatible USB memory device or iPod® is plugged into the USB port **1**, compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.

 


For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

FIRST DRIVE FEATURES

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON-OFF** switch **1** on the steering wheel. The **CRUISE** indicator light will be displayed in the vehicle information display.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. The **SET** indicator light in the vehicle information display will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON-OFF** switch **1** on the steering wheel. Both the **CRUISE** indicator light and the **SET** indicator light in the vehicle information display will extinguish.

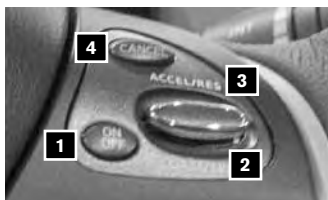


For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

POWER OUTLETS

12V OUTLETS

 - The power outlets are for powering electrical accessories such as cellular phones. They are rated at 12V, 120W (10A) maximum.
- To use a power outlet, open the cap.
- The power outlets on the instrument panel **1** and inside the center console (if so equipped) **2** are powered only when the ignition switch is in the ACC or ON position.
- The power outlet in the cargo area (if so equipped) **3** is powered all the time.

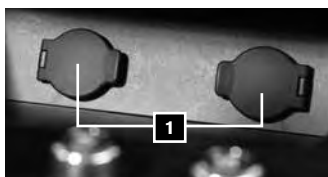

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

120V OUTLET (if so equipped)

- The 120V outlet **4** is located on the back of the center console.



- To use the outlets for devices that require 120V power, place the ignition switch in the ON position and push the power inverter switch **5**.
- The switch will illuminate when enabled.



For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

SYSTEM GUIDE


VEHICLE INFORMATION DISPLAY




The vehicle information display **1** displays items such as:

- Vehicle settings
- Trip computer information
- Drive system warnings and settings (if so equipped)
- Cruise control system
- Intelligent Key operation information
- Indicators and warnings
- Tire pressure information
- 4X4 information (if so equipped)





USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display modes can be changed using the  button **2** and the **ENTER** button **3** located on the steering wheel.

- Press the  button **2** to enter the vehicle information display menu items.
- Press the  button **4** on the steering wheel to navigate through the items in the vehicle information display.
- Press the **ENTER** button **3** to change or select an item in the vehicle information display.
- Press the  button **5** to go back to the previous menu.



RESETTING THE TRIP COMPUTER

1. Press the  button **2** until you reach the trip computer mode **6**.
2. Press the  button **2** again for more than 1.5 seconds to reset average fuel consumption, average speed, distance to empty and journey time.



SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:







- | | | |
|--------------------------------------|--------------------|------------------|
| ■ Driver assistance (if so equipped) | ■ Maintenance | ■ Language |
| ■ Main menu selection | ■ Alarms | ■ Unit |
| ■ Body color | ■ Vehicle settings | ■ Welcome effect |

 
 
For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM¹ (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.²

SYSTEM OPERATING TIPS

- Press the  or  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- For vehicles not equipped with Navigation:
 - To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  or  button on the steering wheel, and after the tone, say “Call Redial”.
- For vehicles equipped with Navigation:
 - Refer to the “Voice recognition (section 9)” of your Navigation System Owner’s Manual for more information.
- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking phonebook names, please be aware some cellular phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To cancel a Voice Recognition session, say “Exit” or press and hold the  or  button on the steering wheel.
- Voice commands can be used to operate various Bluetooth[®],¹ system features using the NISSAN Voice Recognition system. See your Owner’s Manual for detailed information.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode.
- For more detailed information and instructions, refer to your cellular phone’s Owner’s Manual and visit www.NissanUSA.com/bluetooth.

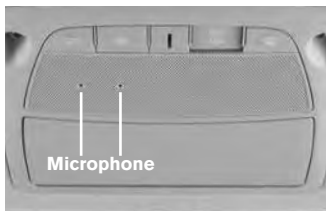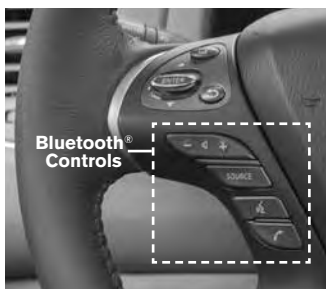

¹ Availability of specific features is dependent upon the phone's Bluetooth[®] support. Please refer to your phone owner's manual for details. Bluetooth[®] word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

² Some jurisdictions prohibit the use of cellular telephones while driving.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

SYSTEM GUIDE

BLUETOOTH® SYSTEM WITH NAVIGATION^{1,2} (if so equipped)

CONNECTING PROCEDURE³

- The vehicle must be stationary when connecting the cellular phone.



1. Press the **SETTING** button on the control panel and touch the "Bluetooth" key on the display.



2. Touch the "Connect Bluetooth" key.



3. A pop-up box will appear on the screen, prompting you to confirm that the connection is for the hands-free phone system. Touch the "Yes" key.



4. Initiate connecting from the cellular phone.

- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.



- When prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)

- For cellular phones that support SSP (Simple Secure Pairing), confirm that the PIN on the vehicle display matches the PIN displayed on the cellular phone.


5. When connecting is complete, the screen will return to the Bluetooth® setting screen.

PHONEBOOK

■ Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth®.2 system.

■ If the phonebook does not download automatically, the vehicle phonebook may be set for up to 40 entries.


■ To manually download entries:

1. Press the  button on the steering wheel and touch the "Quick Dial" key.
2. Touch the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls list.
 - "Copy from the Handset" to save a number that has been downloaded from your handset to the vehicle.
 - "Enter Number by Keypad" to input the number and name manually.






MAKING A CALL

 
To make a call, follow this procedure:

1. Press the  button on the steering wheel. The "Phone" menu will appear on the control panel display.
2. Touch the "Quick Dial", "Call History," "Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Dialing begins when the entry is selected or when the "OK" key is selected.



RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the "Answer" key.
- To reject the call, press and hold the  button on the steering wheel or touch the "Reject Call" key.
- To hang up, press the  button on the steering wheel or touch the "Hang up" key.

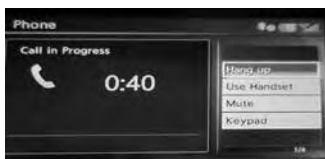

¹ Some jurisdictions prohibit the use of cellular telephones while driving.

² Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

³ Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some applications and features such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features. Compatible smartphone required. Text rates and/or data usage may apply.


To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

SYSTEM GUIDE


BLUETOOTH® SYSTEM WITHOUT NAVIGATION^{1,2} (if so equipped)

CONNECTING PROCEDURE³

- The vehicle must be stationary when connecting the cellular phone.
- 1. Press the  button on the steering wheel. The system announces the available commands.
- 2. Say: "Connect Phone." The system acknowledges the command and announces the next set of available commands.
- 3. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
- 4. Initiate connecting from the cellular phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.
 - When prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
- 5. Say the name for the cellular phone when the system asks you to provide one. You can give the cellular phone a name of your choice.




PHONEBOOK


- The phonebook stores up to 1,000 entries for each cellular phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth[®],² system.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.
- To manually download entries:
 1. Press the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the cellular phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit www.NissanUSA.com/bluetooth for instructions on transferring phone numbers from NISSAN-recommended cellular phones.
 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
 5. The system confirms the name, location and number.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.




MAKING A CALL FROM THE PHONEBOOK

- In some cases, names stored in all UPPERCASE letters may not be recognized by the Voice Recognition system.
- 1. Press the  button on the steering wheel.
- 2. After waiting for the tone, say "Call."
- 3. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith."
- 4. Confirm that the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

- 1. Press the  button on the steering wheel. A tone will sound.
- 2. Say: "Call." The system acknowledges the command and announces the next set of available commands.
- 3. Say: "Phone Number." The system acknowledges the command and announces the next set of available commands.
- 4. Say the number you wish to call starting with the area code in single digit format.
- 5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
- 6. Say: "Dial." The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up the cellular phone at the end of a call or to disconnect during call placement, press the  button on the steering wheel.

¹ Some jurisdictions prohibit the use of cellular telephones while driving.

² Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

³ Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some applications and features such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Compatible smartphone required. Text rates and/or data usage may apply.

 
 
 
To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

SYSTEM GUIDE

BLUETOOTH® STREAMING AUDIO WITH NAVIGATION (if so equipped)

- If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*
- To use your connected Bluetooth® device to stream audio, it will need to be connected as an audio device. The following procedure will initially connect a Bluetooth® device as an audio player and allow you to switch between devices.
 1. Press the **SETTING** button on the control panel and touch the "Bluetooth" key on the display.
 2. Select "Connected Devices".
 3. Select "Audio Player".
 4. Select the name of the device that you are attempting to connect as an audio player.
 5. Select "Select".
 6. Verify that the system confirms that the device has been selected as an audio player.
- Once your Bluetooth® device has been connected as an audio device, press the **DISC-AUX** button on the control panel to select the Bluetooth® Streaming Audio player.
- Bluetooth® connectivity issues can usually be resolved with a reboot of your cellular phone if you do not regularly turn off your cellular phone. Otherwise, try updating your cellular phone with the latest software.

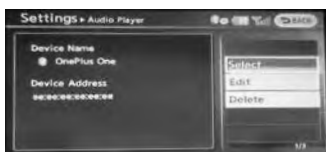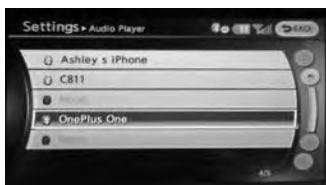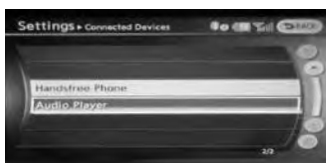

*Some jurisdictions prohibit the use of cellular telephones while driving.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or visit www.NissanUSA.com/bluetooth.


NAVIGATION SYSTEM (if so equipped)

■ Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.

■ The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

■ To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be "grayed-out" or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



- 1 Touch-screen display
- 2 **DEST** (Destination) – Press to enter a destination.
- 3 Multi-function controller – Turn to highlight an item on the screen and press **ENTER** to select the highlighted item. On the map screen, turn to adjust the map scale. To scroll the map, push the controller in the direction you want to scroll.
- 4 **STATUS** – Press multiple times to display audio information, air conditioner status, fuel economy or navigation directions.
- 5 **ROUTE** – Press to access the guidance control functions such as guidance cancellation, route priority, or waypoint setting on the route.
- 6 **INFO** (Information) – Press to display the vehicle, traffic (if so equipped), weather (if so equipped) or Voice Recognition information.
- 7  – Press to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.
- 8 **ZOOM IN, ZOOM OUT** – Press to adjust the map scale.
- 9 **MAP** – Press to display the map. While following a programmed route, press multiple times to change the type of route information.
- 10 **SETTING** – Press to access the system settings.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE

 
 
11 ↶ **BACK** – Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.

12 **VOICE** – Press to hear the current voice guidance for a programmed route.

For more information, refer to your Navigation System Owner's Manual.

NISSAN MOBILE ENTERTAINMENT SYSTEM (MES) (if so equipped)

- With this Dual Head Restraint DVD system, you can play video files via a DVD or CD, providing images and sound both from the front and rear display screens.
- You can also connect auxiliary devices, such as video games, camcorders or portable video players, to the auxiliary jacks **1** located on the back of the center console. (Your device will be controlled through its own control panel.)
- Rear Auxiliary Mode allows rear seat passengers to independently display different sources on each screen.
- Use the remote controller **2**, provided with the system, to operate the rear display screens.
- The rear displays can be activated or deactivated individually by the remote controller **2**.
 - To activate or deactivate the rear displays, select the preferred side (**L** or **R**) and press the **⏻** (power) button on the remote controller **2**.
- The rear displays can be activated or deactivated individually from the front seats using the front display.
 - To activate or deactivate the rear displays, press the "Settings" key then press the "Rear Display" key on the front display. Press "Display Control" and select "ON" or "OFF" for the preferred side.
- Use the headphones **3**, also provided with the system, to listen to audio wirelessly and independently. You may also connect your own wired-headphones to the headphone jacks **4** located on the back of the center console.
- For optimum performance, select the appropriate headphone channel **5** that corresponds to the headrest display being viewed directly in front of you.

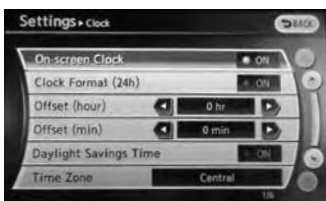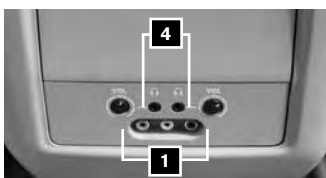

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- To watch or control videos on the front display, make sure the vehicle is in the **P (PARK)** position and the parking brake is applied.
- To reduce driver distraction, the wireless headphones will not operate while located in the front seats and movies will not be shown on the front display while the vehicle is in any drive position.
- To access standard DVD controls on the front display while playing a DVD on the rear display, press the **DISC•AUX** button on the audio control panel while the vehicle is in the **P (PARK)** position and the parking brake is applied.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver system can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos, go to www.nissanownersinfo.mobi/2016/pathfinder or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/nowners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2016 Nissan North America, Inc.

QR16EA 0R52U1

Printing: February 2016 (09)

